



Part # 52-5750-00

17' SUPER SPORT **SUN TOP W/BOOT**

Installation Hardware:

Part No.

2 – Stainless Steel Angle Hinges w/ Bolt	25-0367-00
8 – 1/2" X 8/32" R.H. Self-Tap Machine Screws	25-0322-00
4 – 10/32" Well Nuts	16-1607-00
4 – 3/4" x 10/32" FHM Screws	25-0298-00
4 – SS Eyestraps	25-0610-00
2 – 1/4" Lock Washers	25-1404-00
1 – Installation Drawing	15-1007-01

Extra parts may be found in this package which would enable this product To be installed on other Boston Whaler models.

Boston Whaler Suntop Pt #52-5750-00, Installation Diagram for 17' Super Sport models

Rev. A


DWG NO. 15-1007-01

ENGINEERING DEPARTMENT

Boston Whaler, Inc.



Rockland, Mass. 03370

SCALE	DATE	DRAWN	CHECKED	APPROVED
—	6/7/83	DB		JW

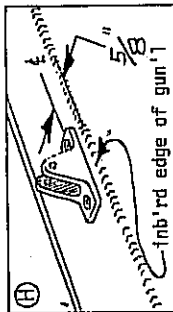


Hinge, secure with 10-32 flat head machine screws and well-nuts. See (H) and also Well-nut detail.

Eyestraps for 13' boat, use 1/2"x8-32 round head self-tapping machine screw and 1/8" drill bit. For 15' boat see (I).

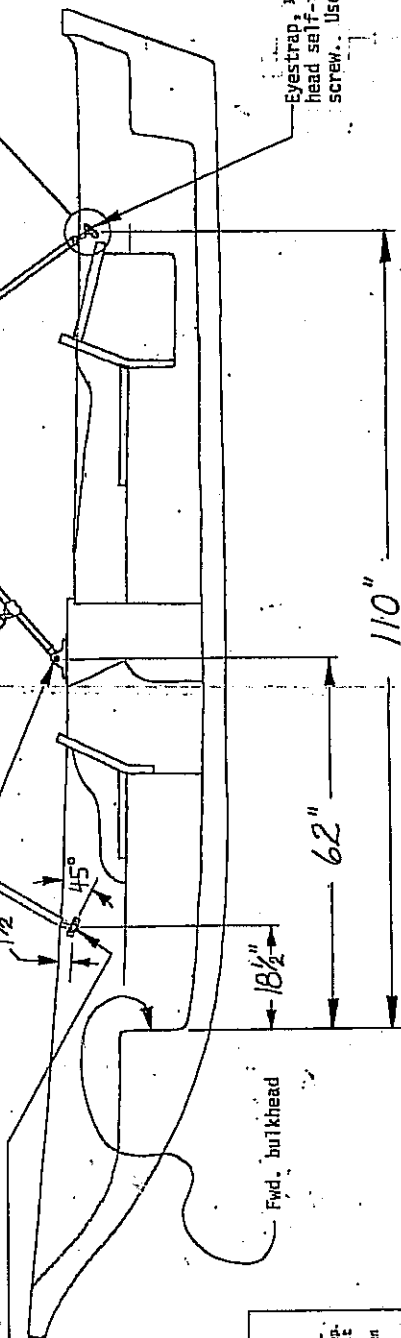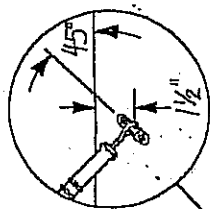

Well-nut detail

Drill 3/8" hole 1" deep. Insert well-nut and fit hinge over - Insert machine screw - tighten to expand well-nut (prevents easy turns).

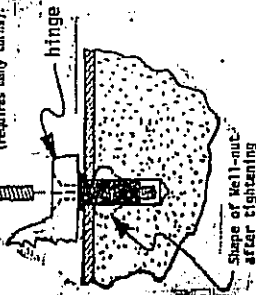

Parts List

52-5750-00 Sun Top with boot.

Includes: (4) eyestraps
(8) 1/2"x8-32 self-tapping machine screws
(2) hinges
(4) #10-32 well nuts
(4) 3/4"x10-32 flat head machine screws